

URBAN TEE VALVE
REMOVING VALVE SEAT WASHER FROM STUFFING BOX



USE SUPPLIED URBAN SPANNER AND LOCATE
FLAT SLOTS ON EITHER SIDE OF THE VALVE BODY

URBAN TEE VALVE
REMOVING VALVE SEAT WASHER FROM STUFFING BOX



STEP 2

USE SUPPLIED URBAN SPANNER TO LOOSEN
STUFFING BOX FROM VALVE BODY

URBAN TEE VALVE
REMOVING VALVE SEAT WASHER FROM STUFFING BOX



STEP 3

UNSCREW STUFFING BOX FROM VALVE BODY BY HAND

URBAN TEE VALVE
REMOVING VALVE SEAT WASHER FROM STUFFING BOX



STEP 4

SEPARATE VALVE BODY FROM THE STUFFING BOX, AND
LOCATE VALVE SEAT WASHER AND SCREW

URBAN TEE VALVE
REMOVING VALVE SEAT WASHER FROM STUFFING BOX



STEP 5

USE FLAT SCREW DRIVER TO UNSCREW VALVE SCREW
FROM PUSH BUTTON TO RELEASE THE WASHER

DEPENDING ON THE SCREW TYPE, YOU WILL USE IETHER A
FLAT SCREW DRIVER, OR A 3mm ALLAN KEY

URBAN TEE VALVE
REMOVING VALVE SEAT WASHER FROM STUFFING BOX



REMOVE VALVE SEAT SCREW BY HAND

URBAN TEE VALVE
REMOVING VALVE SEAT WASHER FROM STUFFING BOX



STEP 7

REMOVE VALVE SEAT WASHER BY HAND